 
 
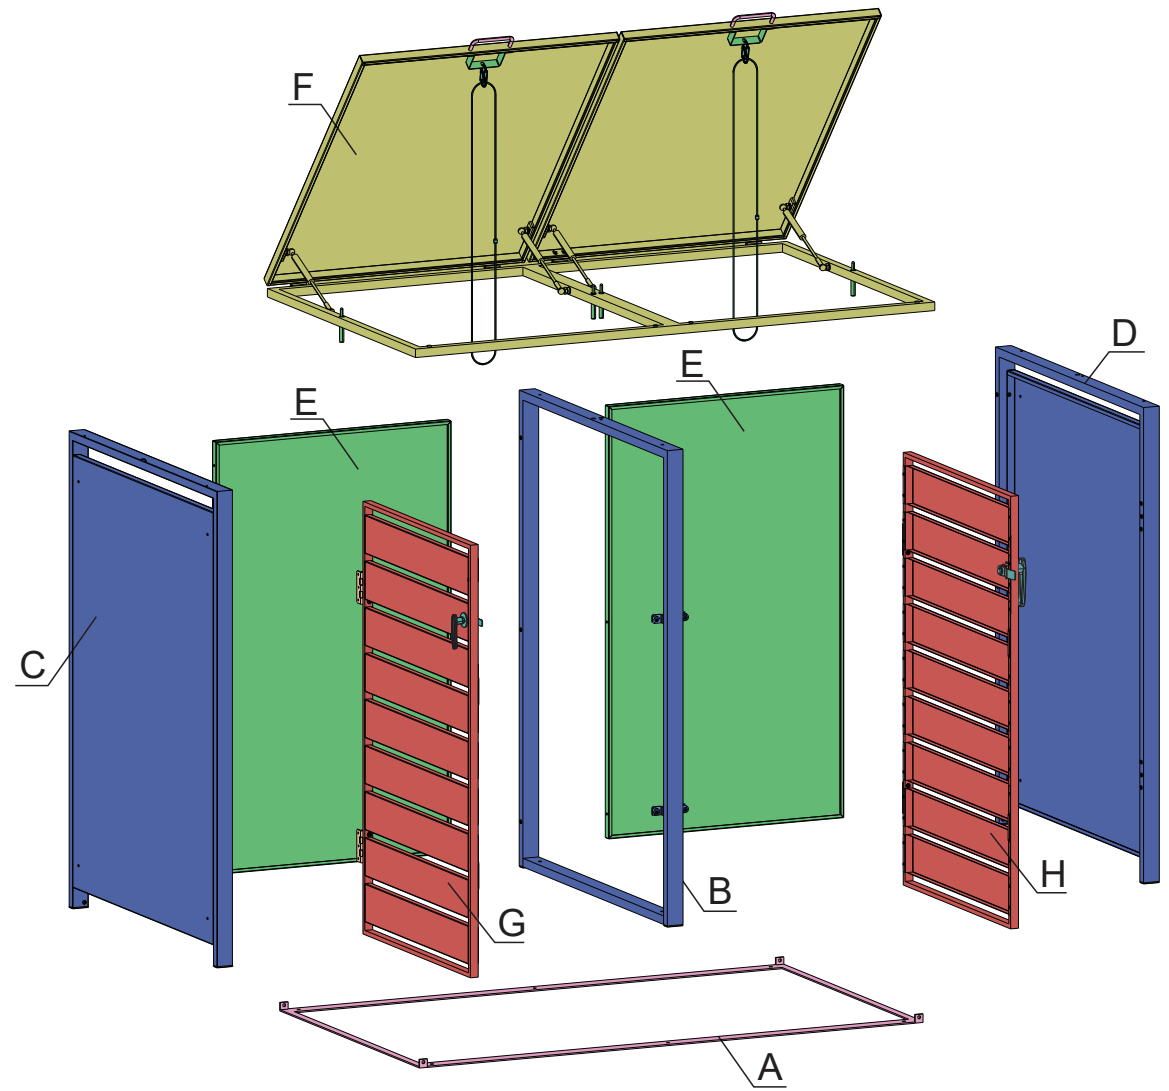 
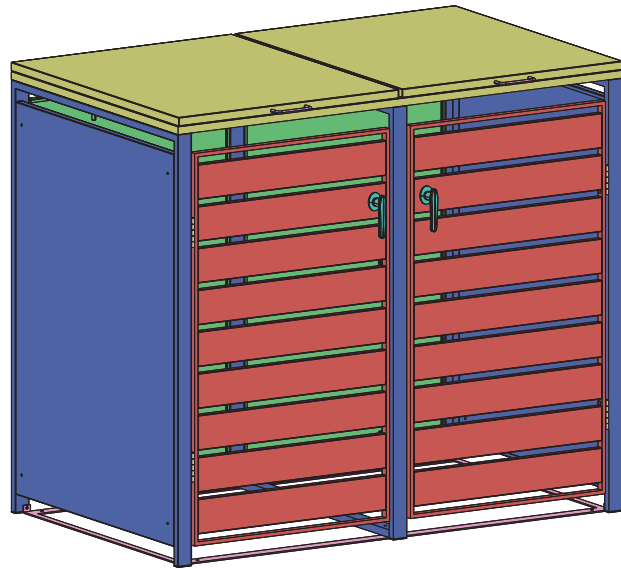 
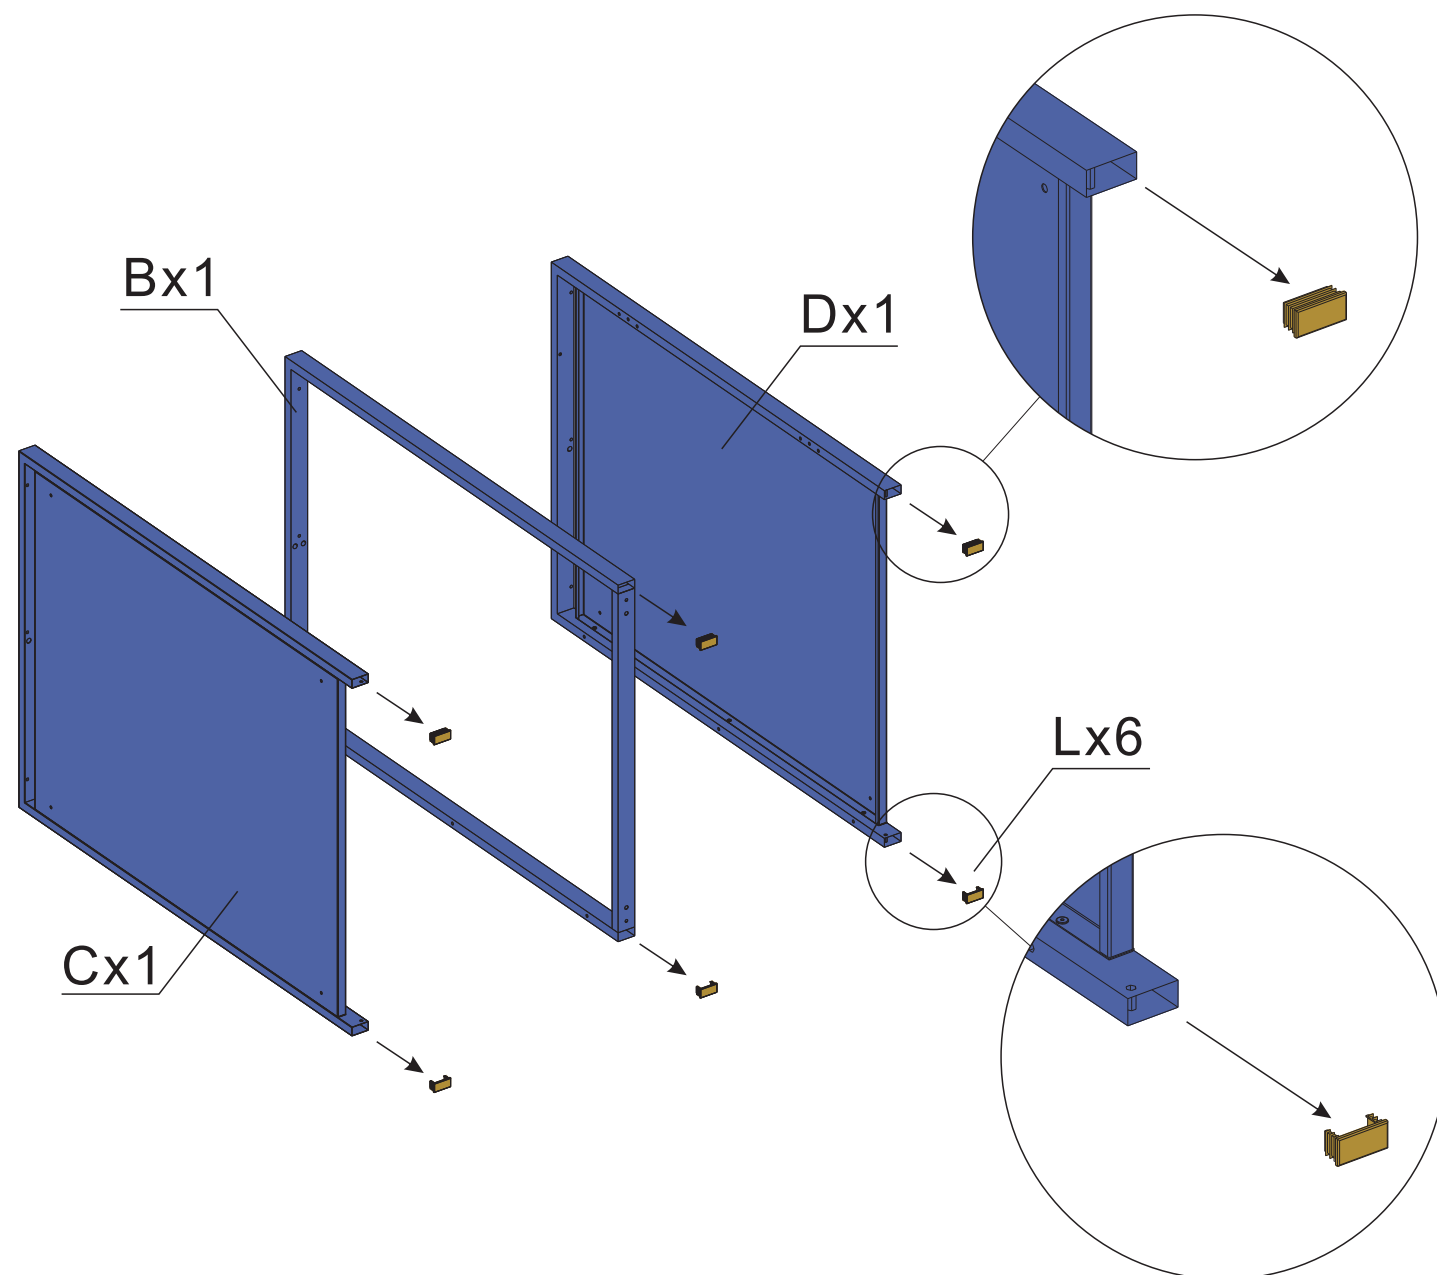 


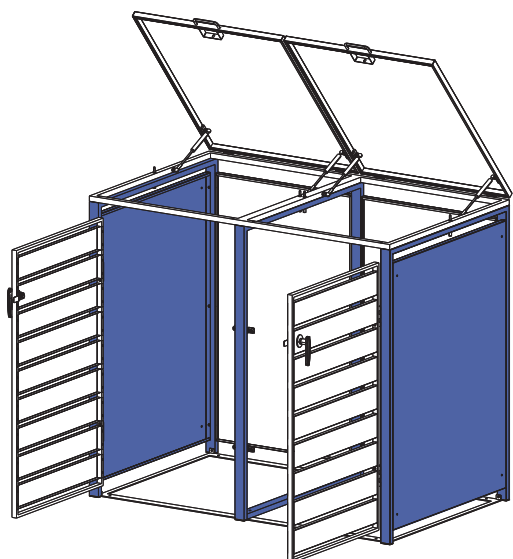




Ax1	Bx1	Cx1	Dx1	Ex2			
Fx1	Gx1	Hx1	Ix2	Jx1	Kx4	Lx6	
Mx2	Nx2	Ox2	Px4	Qx6	Rx16	Sx10	
					M4x10mm	M4x20mm	
Tx9	Ux30	Vx2	Wx4	Xx4	Yx1	Zx1	Y1x4
M4x30mm	M4x12mm						

Poznámka: Ak chcete pripojiť ďalšie boxy na koše, použite prosím položky S, W + X



KROK1

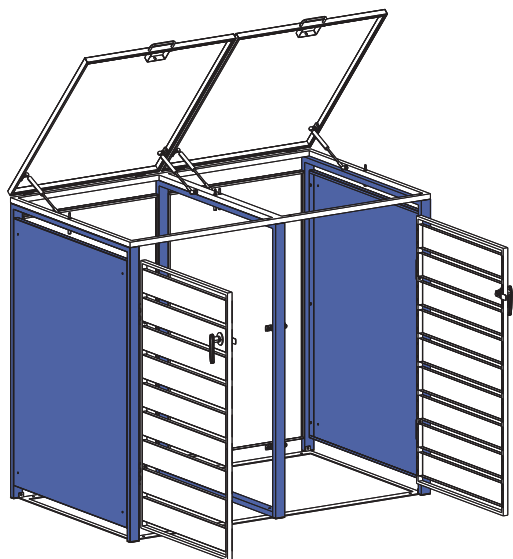

   
KROK2

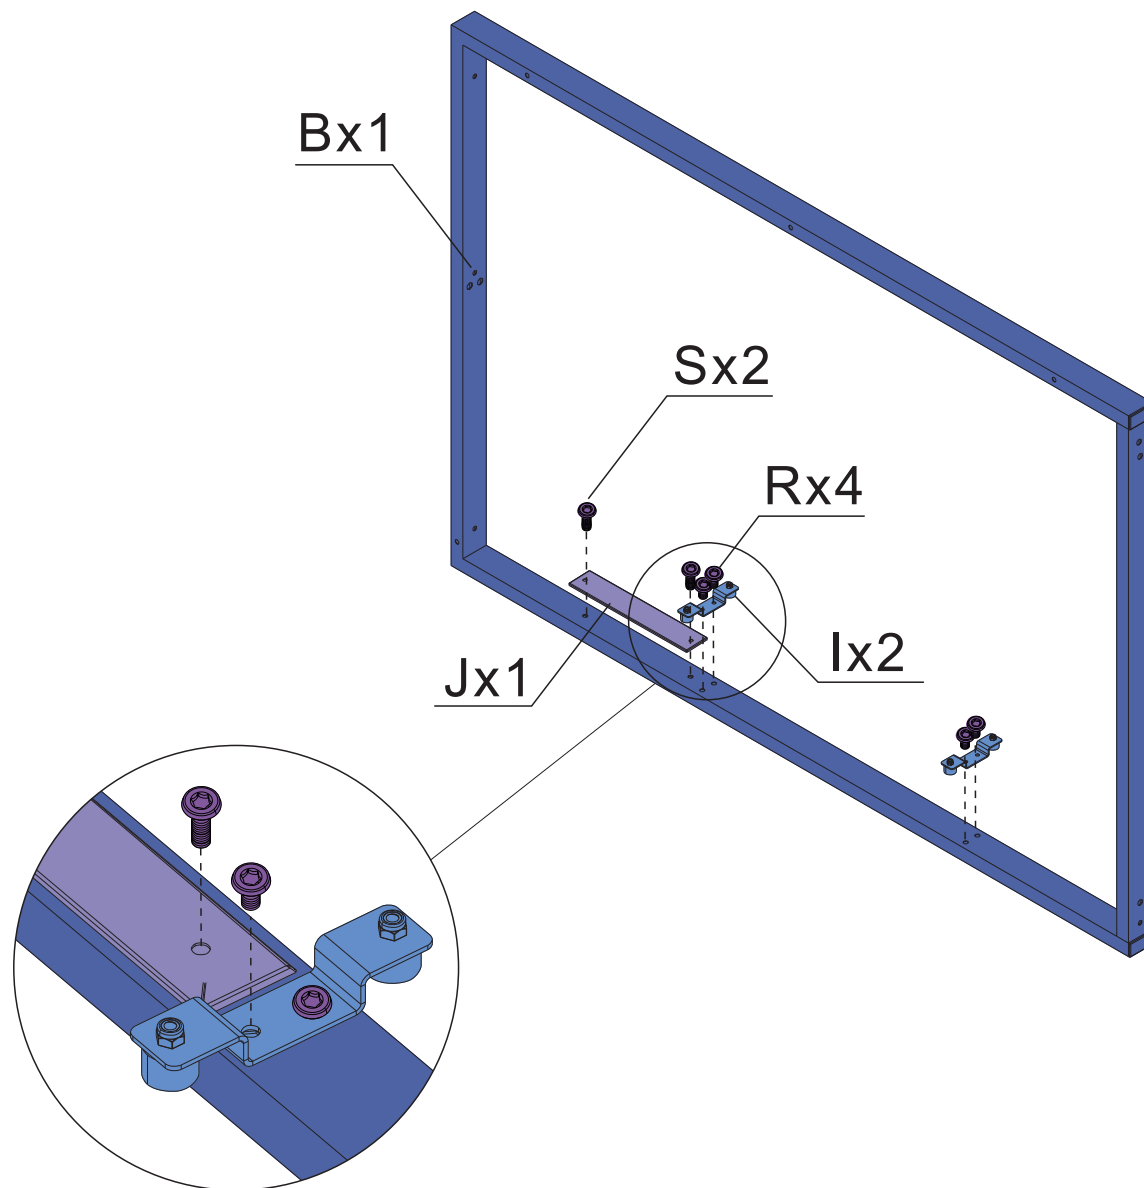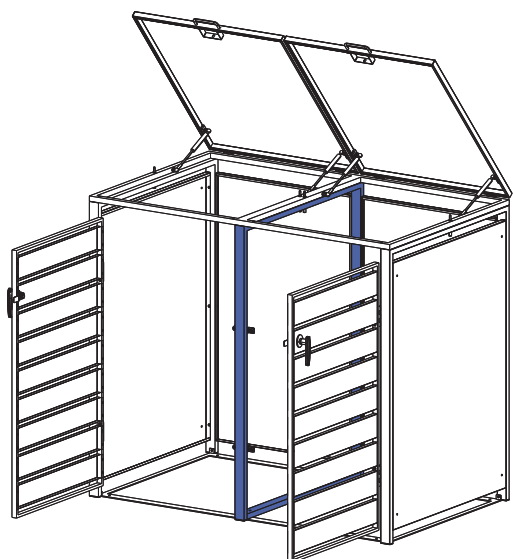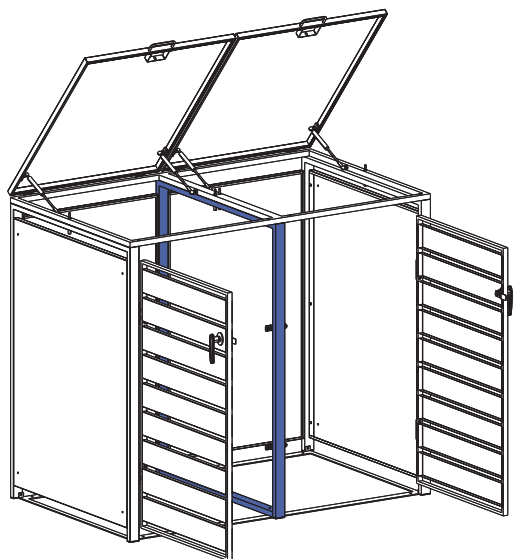

KROK3

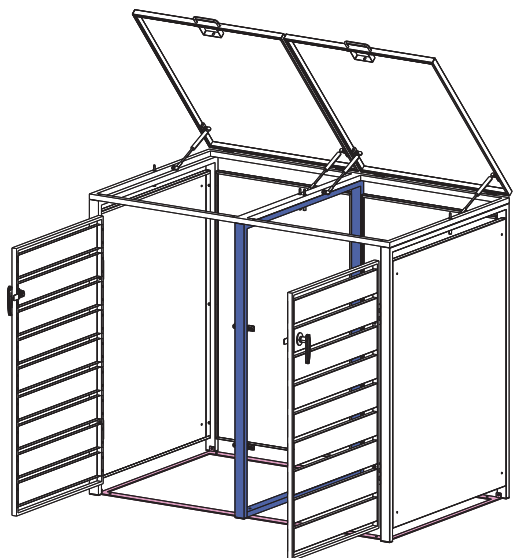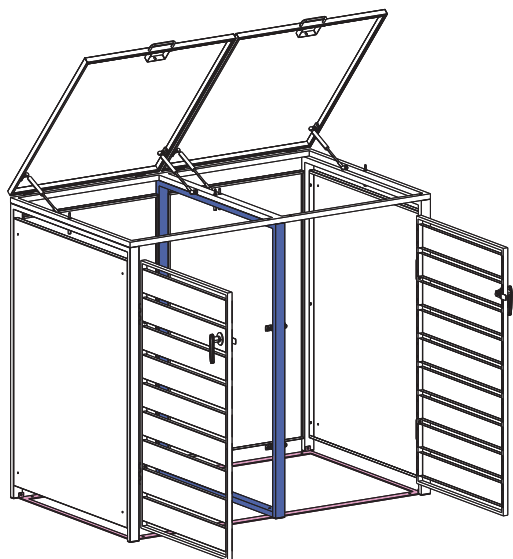  


Bx1



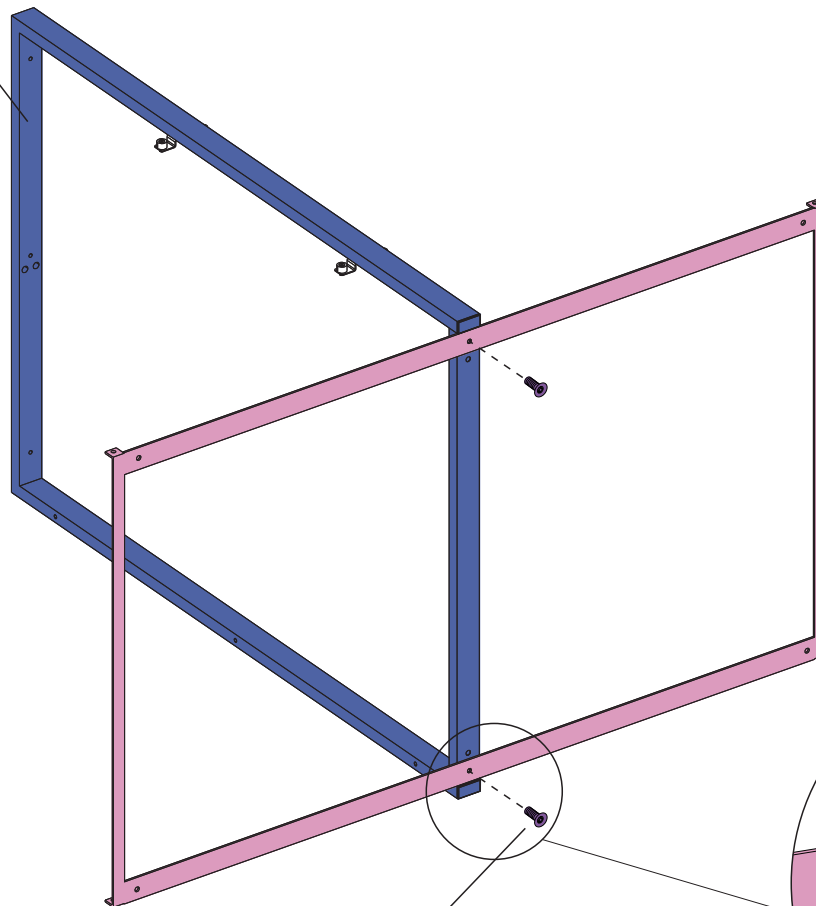 


Ax1



 
Ux2

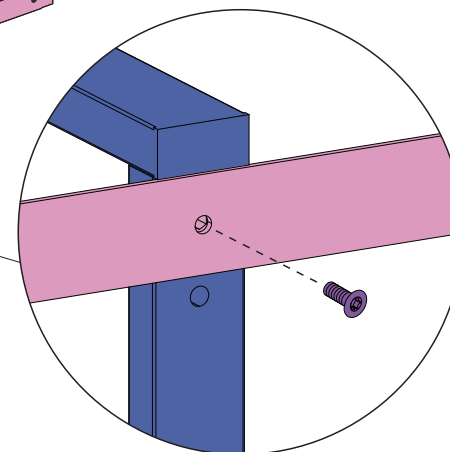




KROK4

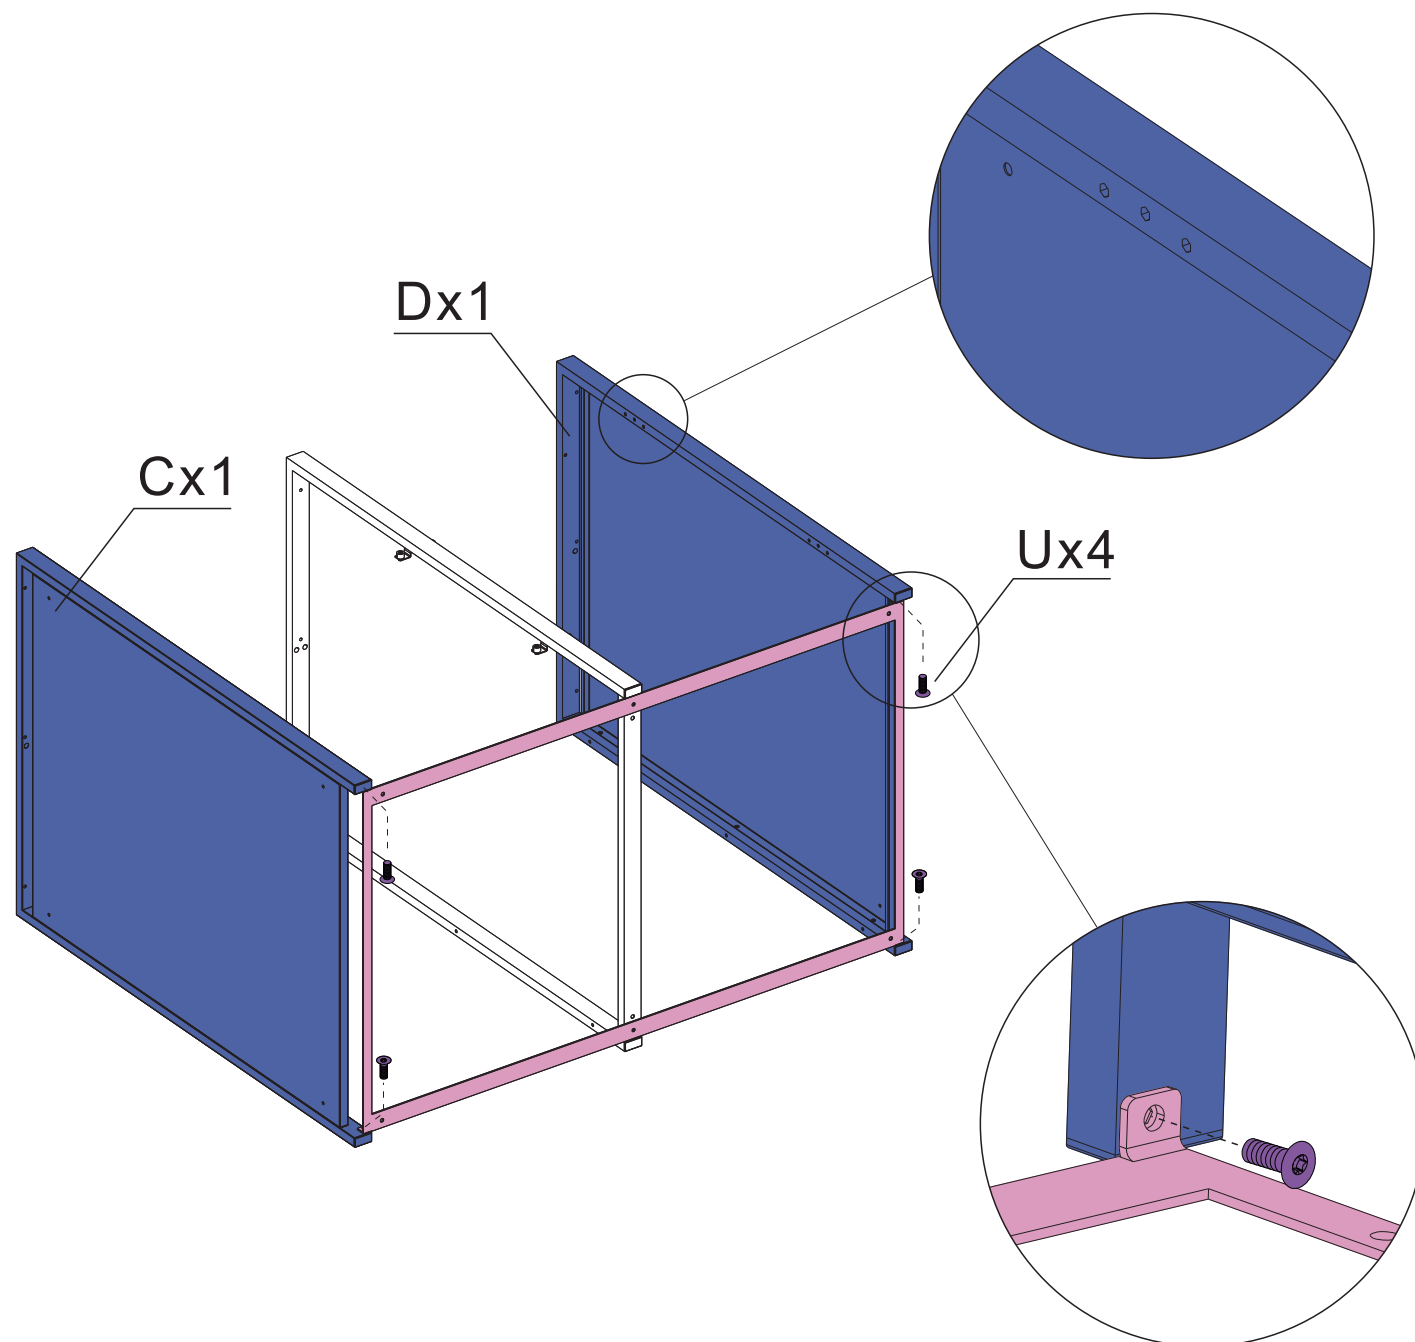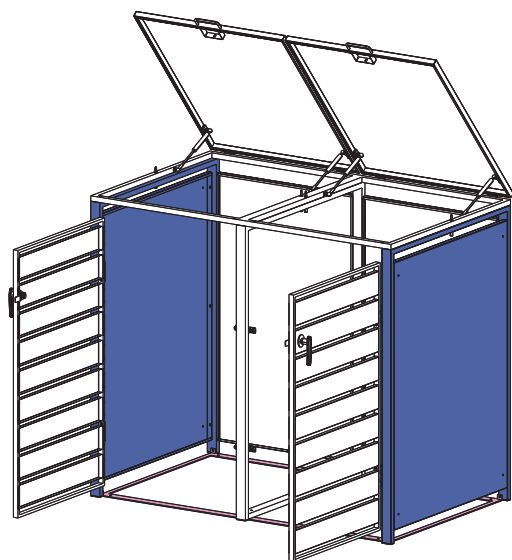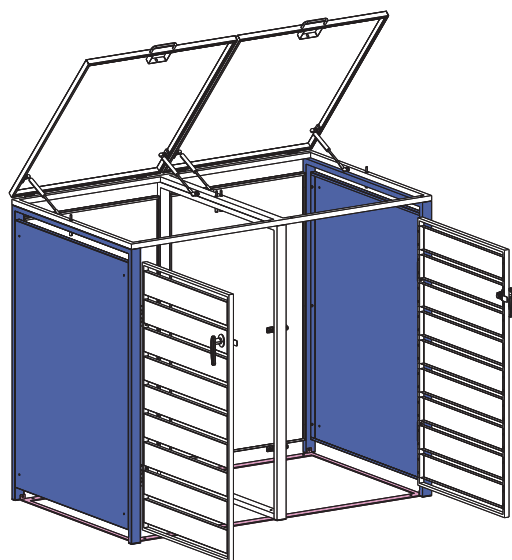   




KROK5

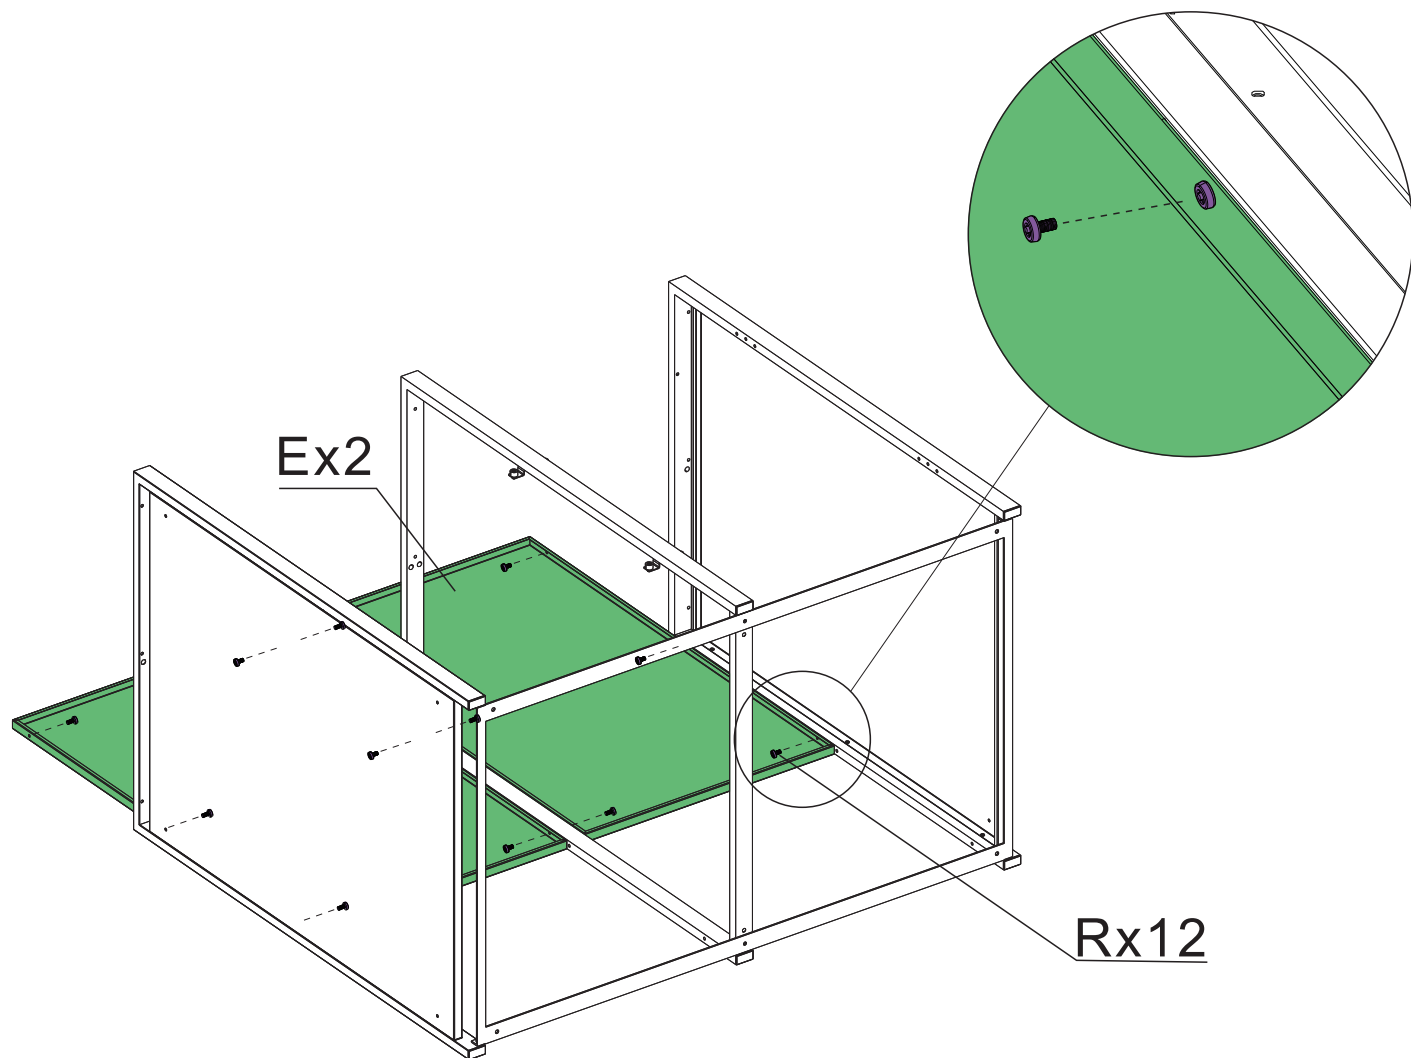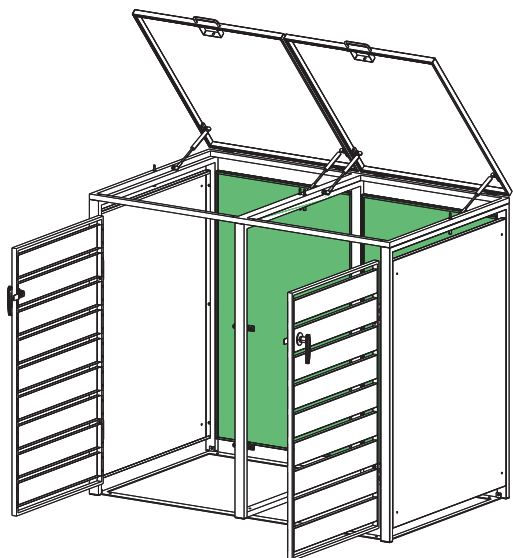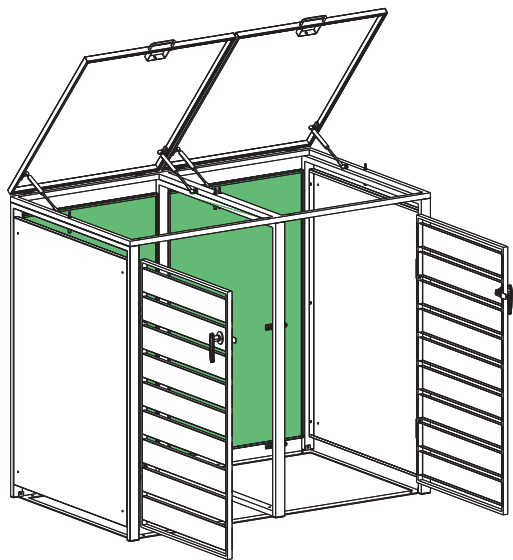   






KROK6

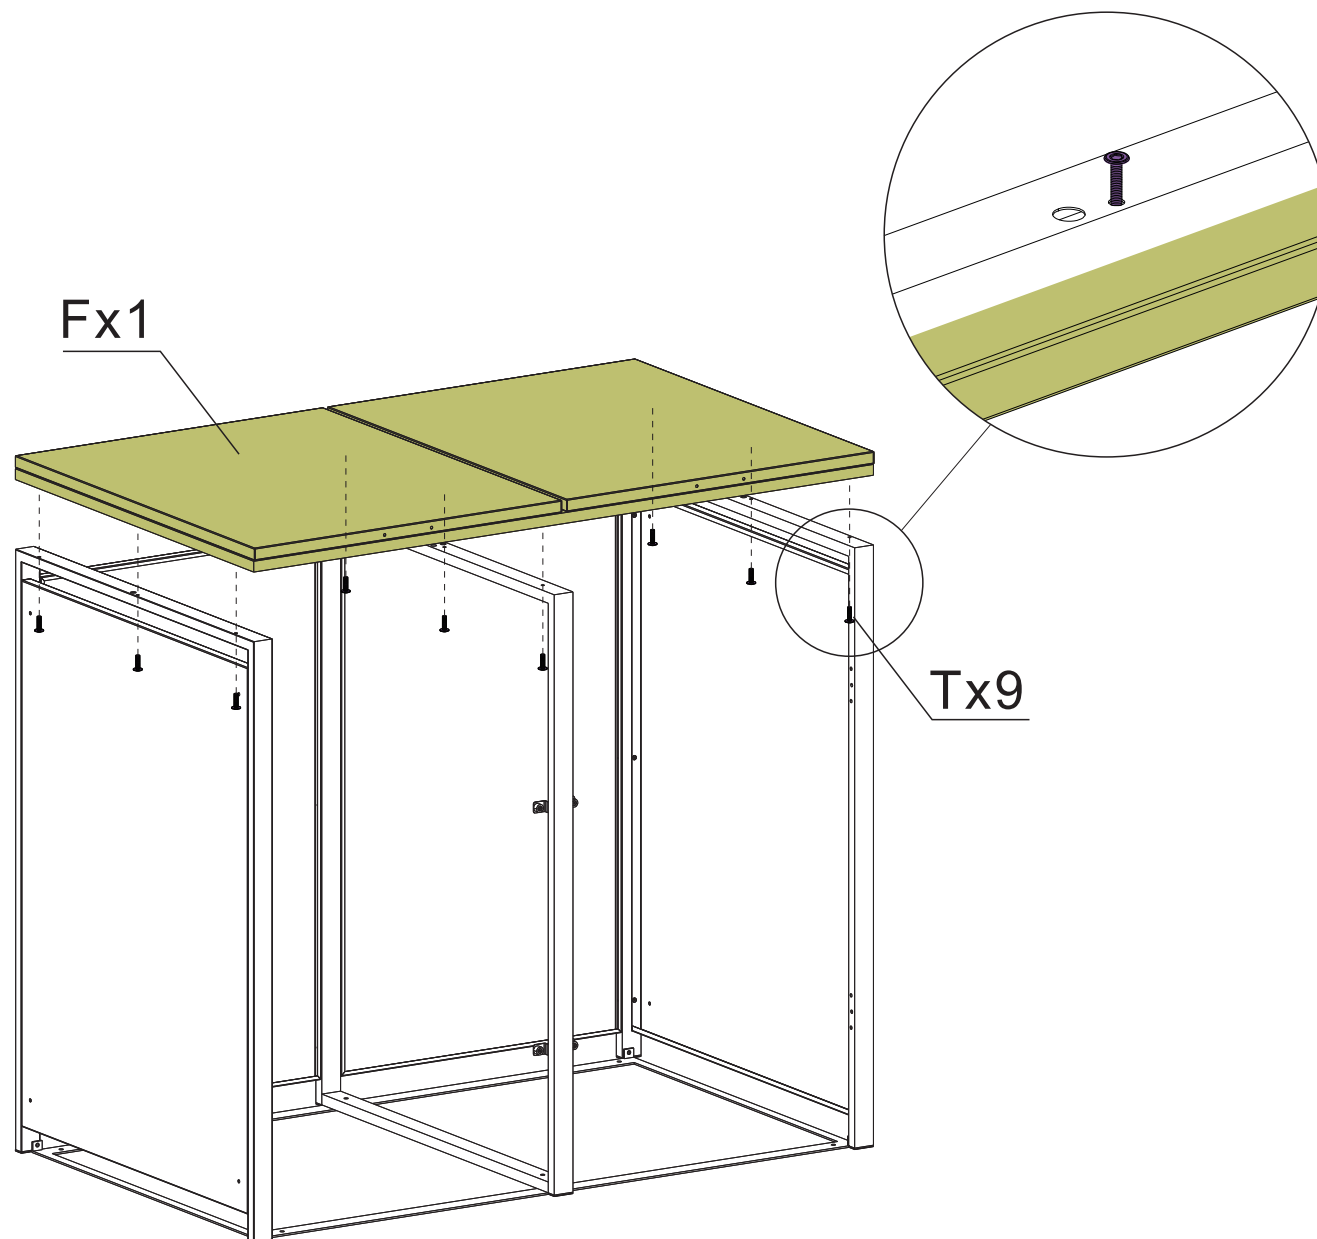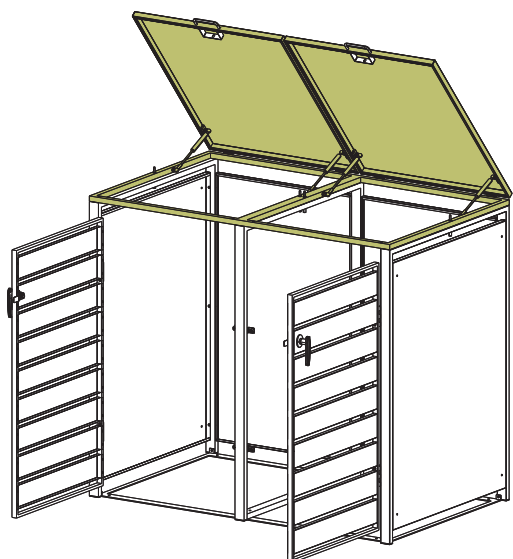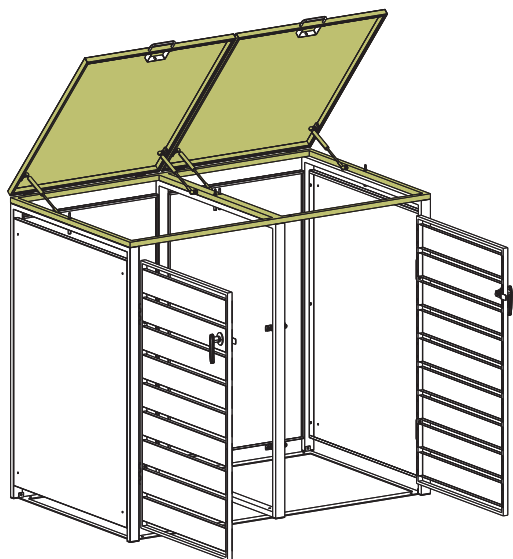   

KROK7

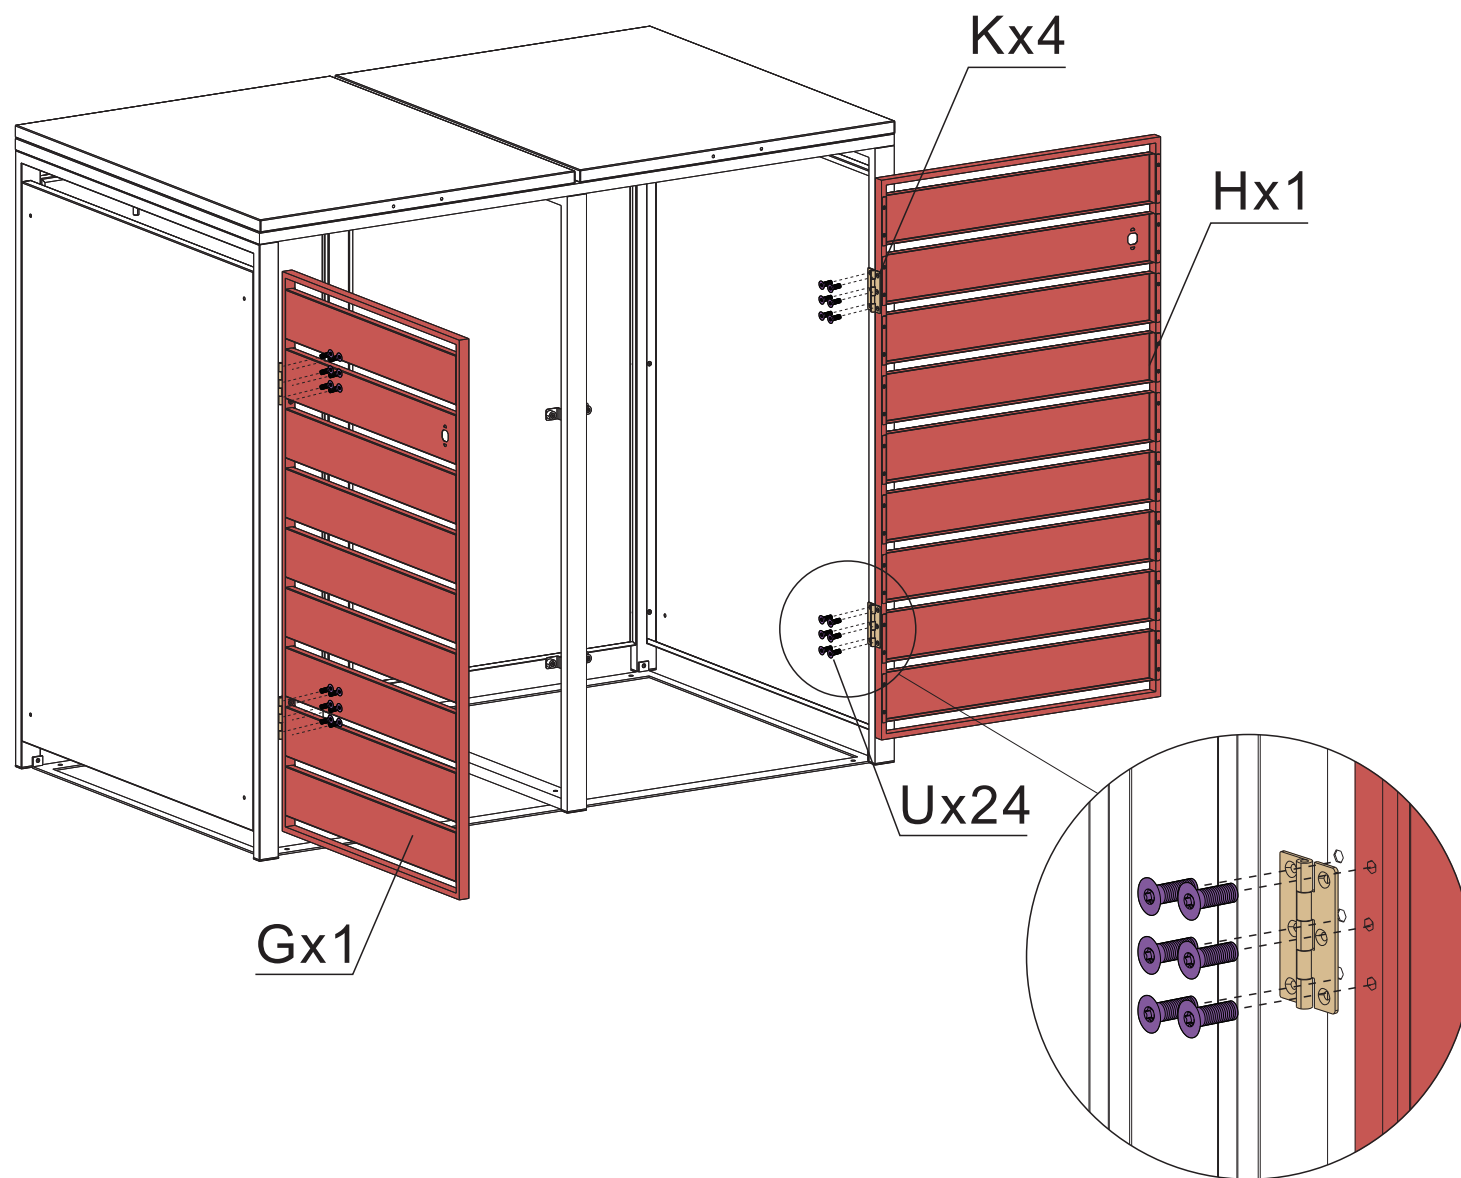 
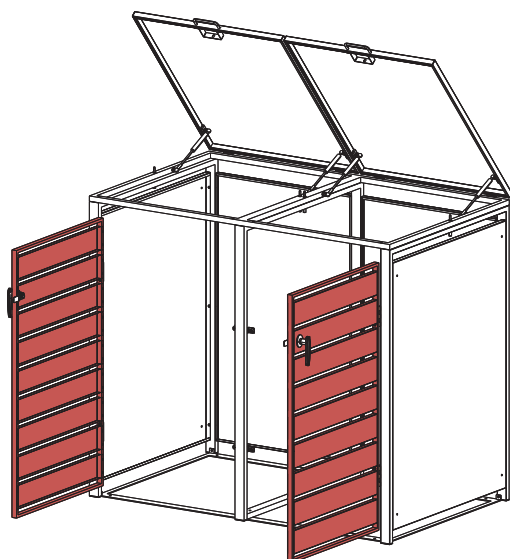 
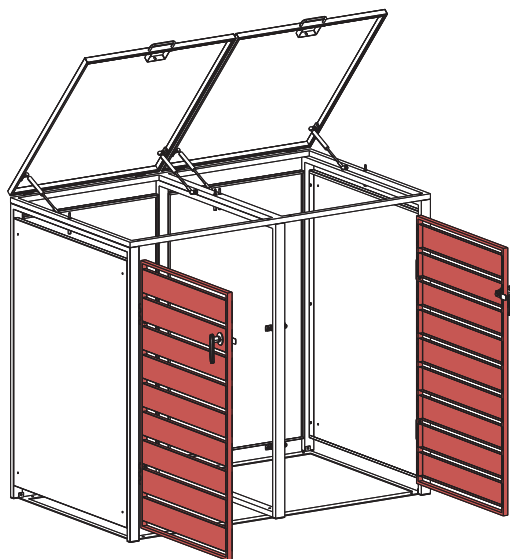 


KROK8

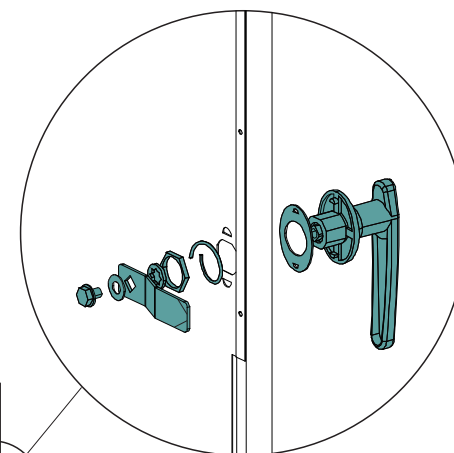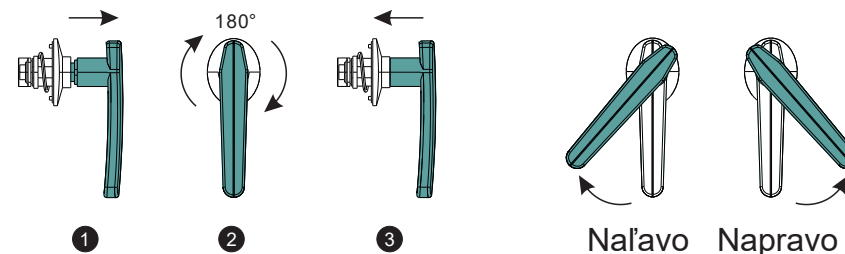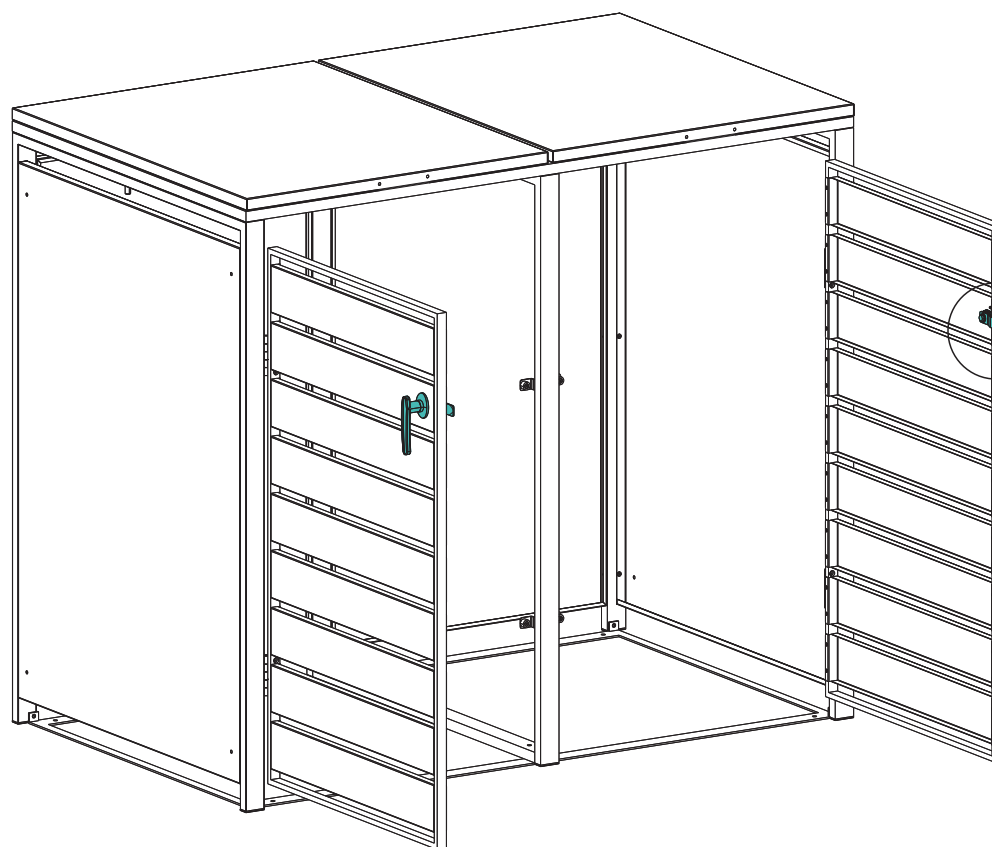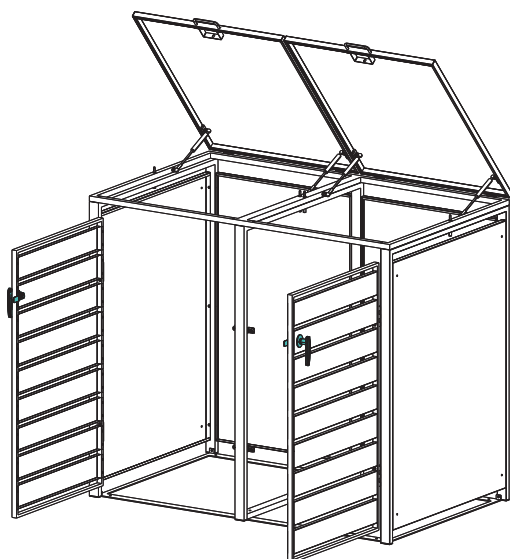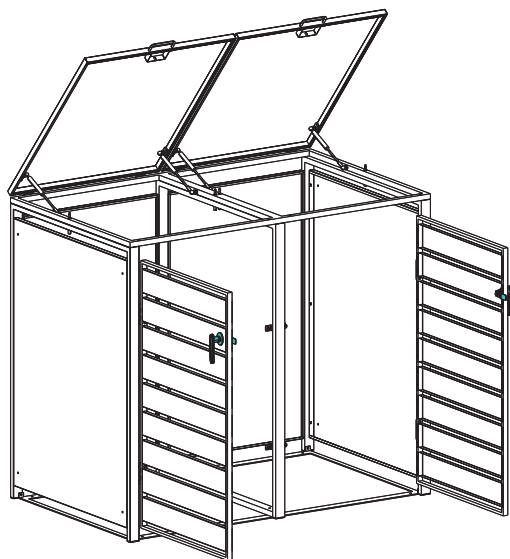     


Mx2

   KROK9

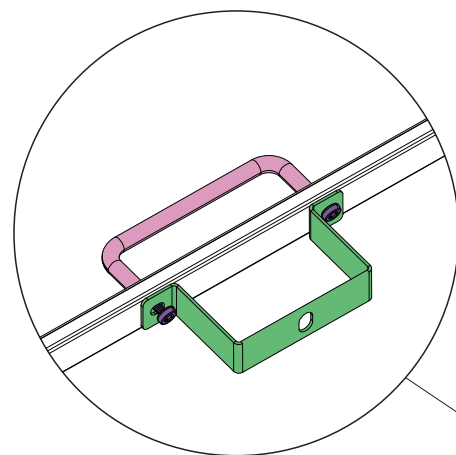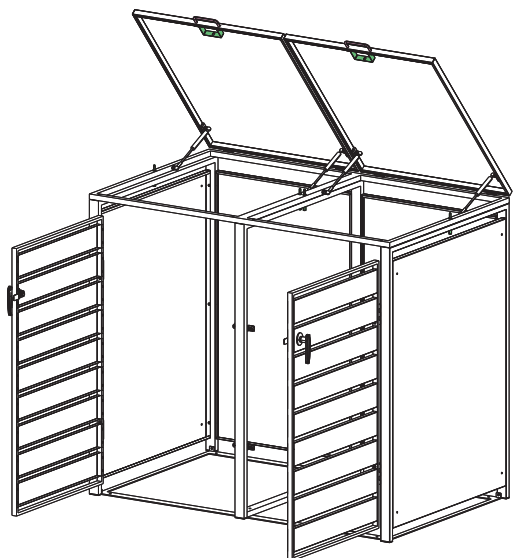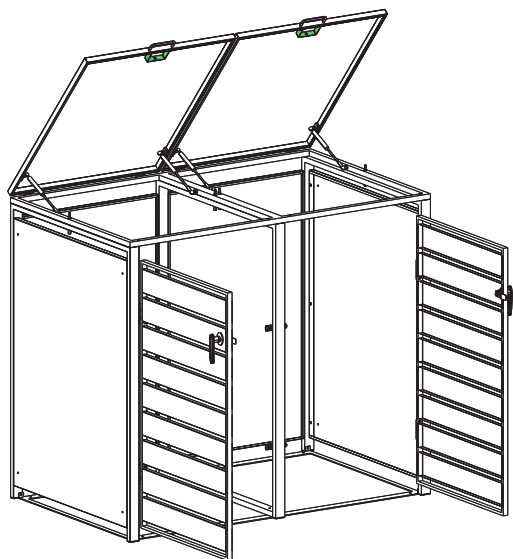



Nx2

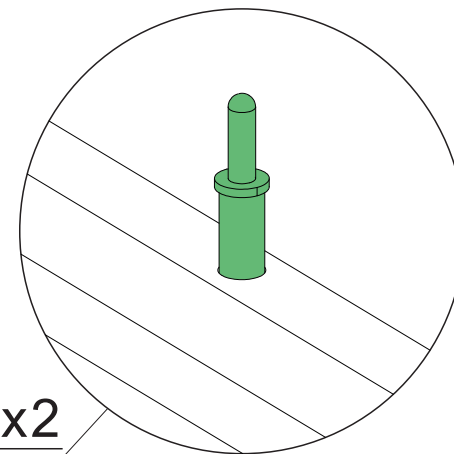 


Ox2

Sx4

  Px4

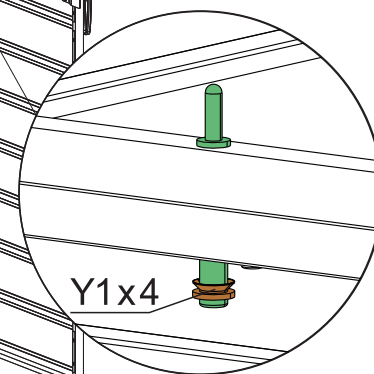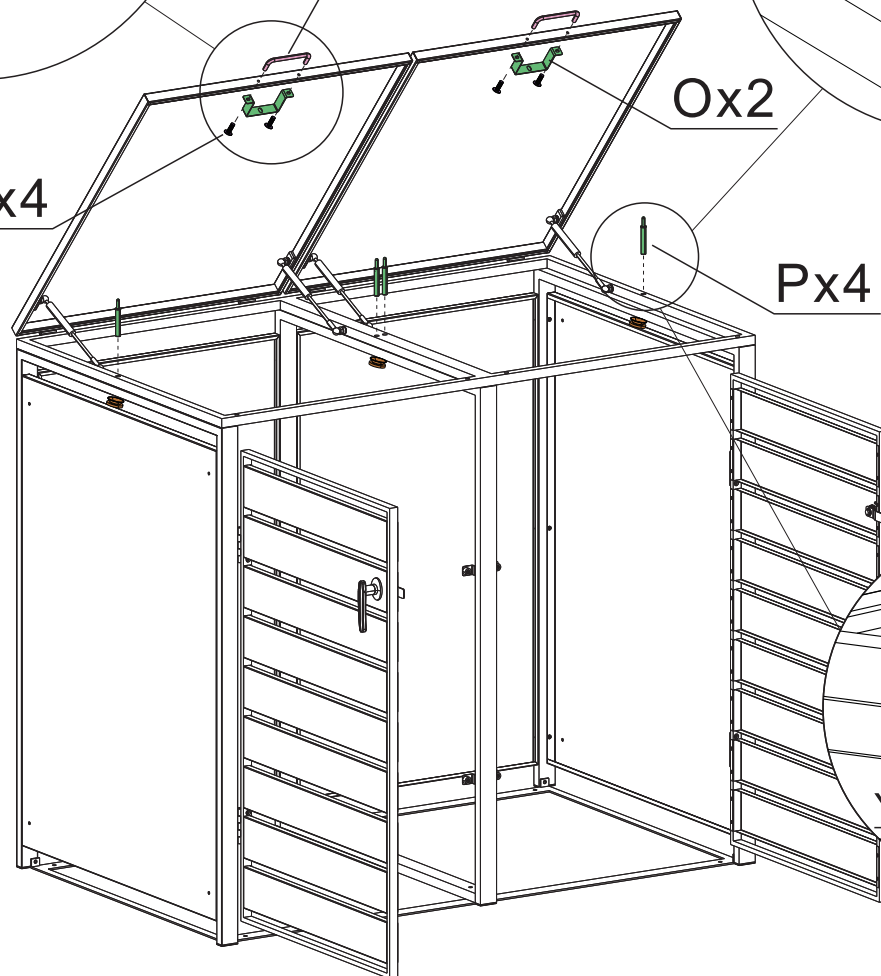

Y1x4

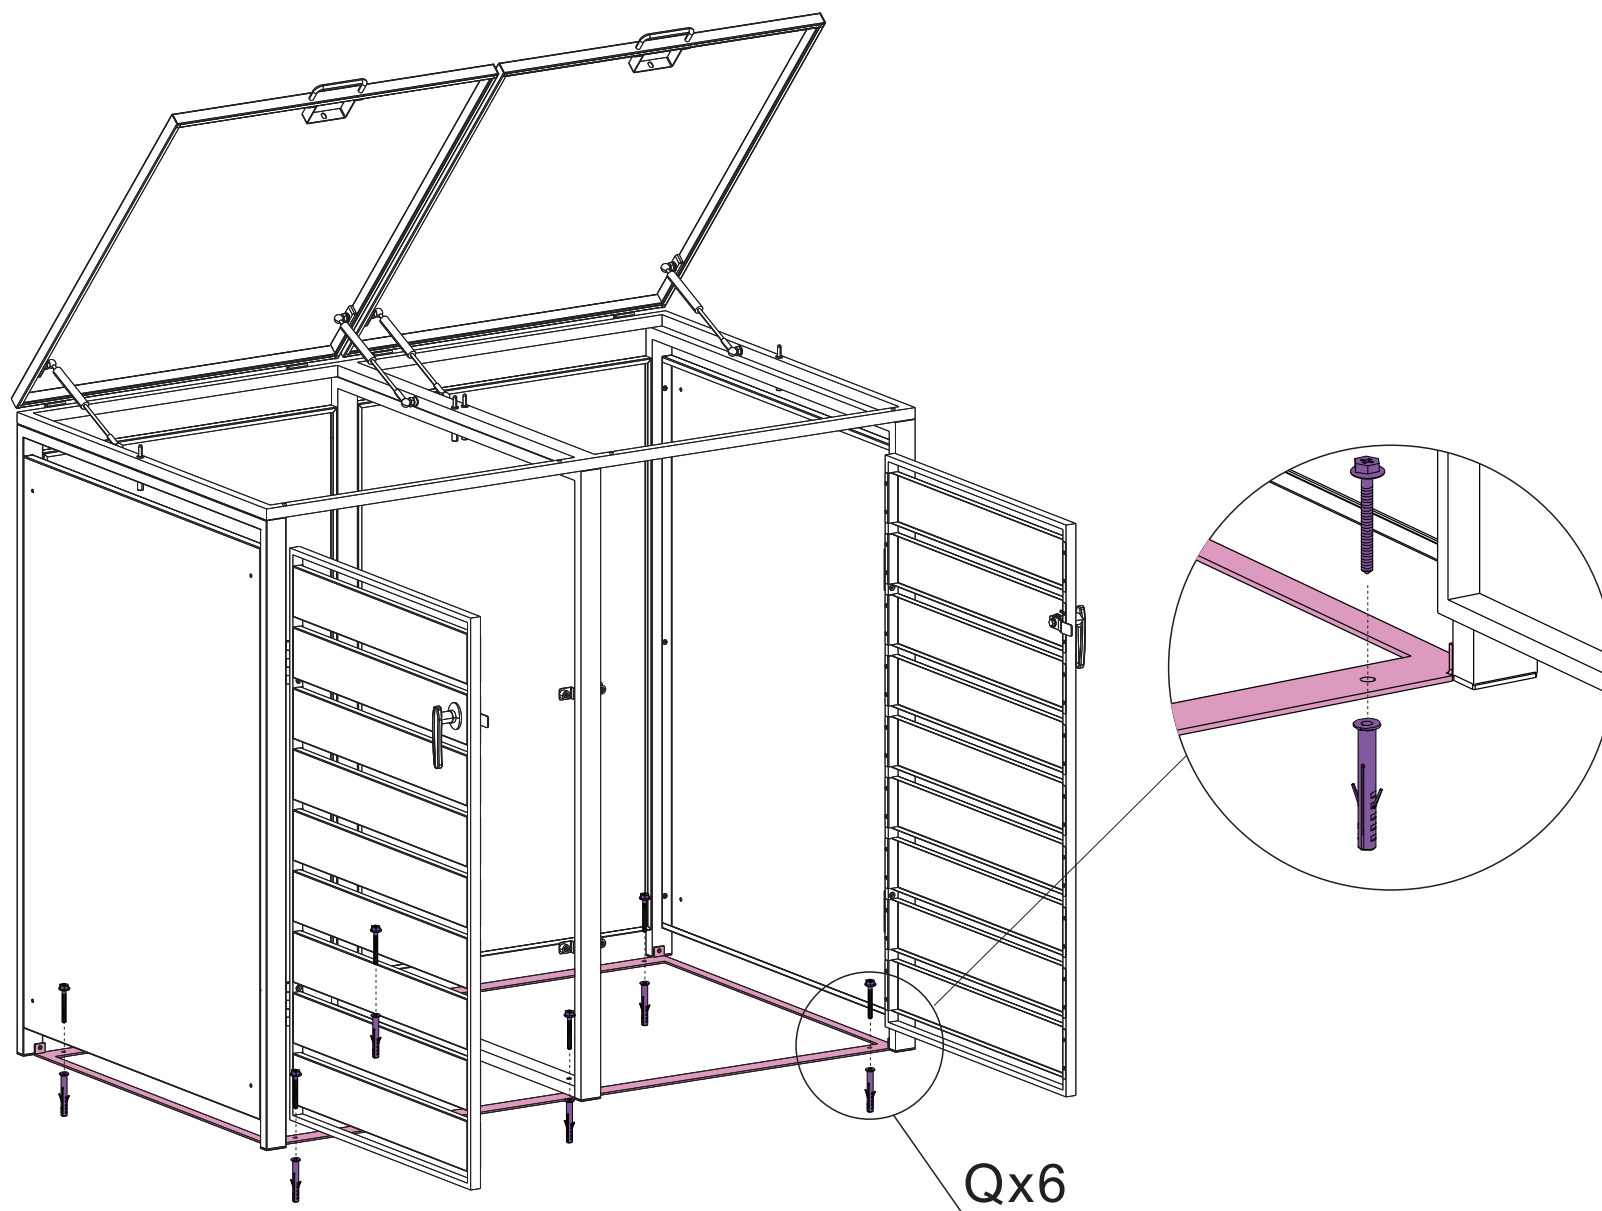 

KROK11

